

8 Easy Steps to Obtaining Fuel in a Highly Controlled Efficient Fueling Environment



Insert your **Driver Card** into the card reader and remove immediately. If you are using a **2-Card System**, insert your **Vehicle Card** and remove immediately.



Activate the nozzle by engaging lever on dispenser. Then pull trigger and begin dispensing fuel.



If you are using a **Mag Stripe Card**, insert your card in the slot on the right and remove immediately.



Turn Off Pump -Hang Up Nozzle before driving away.



Enter your information when prompted and press **Enter** following each prompt.



Use the HELP PHONE nearby if you need assistance or to report an incident.

Lockard Oil P.O. Box 128 1380 Rt. 286 HWY E. Suite 212 Indiana, PA 15701

Phone: (800)424-FUEL or (724)349-2034 Fax: (724)349-3018

WWW.LOWERYOURFUELCOSTS.COM